## Additel 681

## **Digital Pressure Gauges**





- 0.02%, 0.05%, 0.1%, 0.2% FS or 0.1%RD accuracy
- % pressure indication with fan-shaped graph scale for visual reference
- Fully temperature compensated accuracy
- Panel mount gauges are available
- Intrinsically safe version (681IS)
- Data logging option
- IP67 rated (681IS)



Gauge pressure

Differential pressure

### **OVERVIEW**

With advanced microprocessor technology and state-of-the-art silicon pressure sensors, the 681 series digital pressure gauges provide an accurate, reliable, and economic solution for a wide range of pressure applications. They are loaded with functionality and remarkably easy to use. To reach the best performance, every silicon pressure sensor in our gauges is specially aged, tested and screened before assembly. At Additel, fully temperature compensated accuracy means every sensor is pressure tested at several environmental temperatures from -10°C to 50°C. With this test data individual coefficients are generated and stored in the gauge characterizing its performance over the full temperature compensated range. And now the ADT681IS comes with an IP67 rating meaning it is dust resistant and water proof, submersible in 1 meter of water.

### Designed to fit your need

Additel pressure gauges give you the widest variety of sensor choices on the market. Whether you require low inches of water measurement or very high pressure measurement, we have a gauge that will meet your need. We offer sensors which are  $\pm 1$  inH<sub>2</sub>O ( $\pm 2.5$  mbar) to 60K psi (4,200 bar) and everything in between.

Do your applications require you to measure both positive and vacuum pressure? Our compound gauges do not compromise accuracy and provides you with the same high accuracy specification on both positive and vacuum pressures. We offer a wide variety up to 300 psi (20 bar). If you need a higher range, just contact us and we can likely customize one to meet your need. We also offer absolute pressure sensors to 5K psi (350 bar) and a full range of differential pressure sensors from  $\pm 1$  inH<sub>2</sub>O ( $\pm 2.5$  mbar) to  $\pm 300$  inH<sub>2</sub>O ( $\pm 700$  mbar). Are you looking for a pressure gauge to use in hazardous areas? Our certified (ATEX, CSA US & IECEx) intrinsically safe models (681IS) are designed for pressure measurement in hazardous areas.

If you need to panel mount our sensors, we offer the option (see ordering information) for a back-mounted pressure port and gauge housing designed to fit in a panel. And most recently, we've added the option to do stand-alone data logging with the 681. Now you can record more than 21,000 records internal to the 681 series. Each record includes date, time, pressure and temperature readings. Download the logged data with our free Additel/Land software or you can purchase our Additel/Log II for real-time logging and data analysis. The 681 series digital pressure gauges are unmatched in performance and reliability. Best of all, they are very affordable.

### **FEATURES**

- Pressure ranges to 60,000 psi (4,200 bar)
- 0.02% full span accuracy (681-02)
  - 0.05% full span accuracy (681-05)
  - 0.1% full span accuracy (681-10)
  - 0.2% full span accuracy (681-20)
  - 0.1% reading span accuracy (681-RD)
- IP67 rated: Submersible in 1 meter of water(681IS)
- Fully temperature compensated accuracy from 14°F to 122°F (-10°C to 50°C)
- Up to eleven selectable pressure units
- Large, easy to read display with 5-digit resolution

- Backlit display
- % pressure indication with fan-shaped graph scale for visual reference
- Display flash warning when pressure over 120% of FS
- Bottom mount or panel mount
- ATEX certified intrinsically safe (Model 681IS)
- ISO 17025 accredited calibration with data(included)
- 9V battery power or AC adapter (optional)
- Data logging to 21,843 records (includes date, time, pressure and temperature)

# Addite

### **SPECIFICATIONS**

Model	ADT681	ADT681IS					
Description	Digital Pressure Gauge	Intrinsically Safe Digital Pressure Gauge					
Intrinsic Safety & European Compliance	<b>( €</b> CE marked	ATEX certified intrinsically safe  (Ex) II 1G EX ia IIC T4 Ga  IEC REST  TUR 16.0023X					
	681(IS)-02: 0.02% of full span						
Accuracy	681(IS)-05: 0.05% of full span						
(For detailed accuracy, please	681(IS)-10: 0.1% of full span						
see pressure range table)	681(IS)-20: 0.2% of full span						
	681(IS)-RD: 0% to 20% of Range: 0.02% of full span 20% to Vacuum: 0.25% of full span <sup>[1][2]</sup>	110% of Range: 0.1% of reading					
Gauge Types	Gauge pressure, compound pressure, absolute pressure, diffe	erential pressure and barometric pressure					
Fan-shaped Graph Scale	Similar to analog dials, including pressure swing, $\%$ indicate alarm.	on with fan-shaped graph scale for visual reference, low/high					
	Description: 5 full digit FSTN LCD						
Display	Display rate: 3 readings per second (Default setting).						
1 7	Adjustable from 10 readings per second to 1 reading every ten seconds						
<b>5</b>	Numeral display height: 16.5mm (0.65")	100 : 11 0000 11 0000					
Pressure Units	Pa, kPa, MPa, psi, bar, mbar, kgf/cm², inH <sub>2</sub> O@4°C mmH <sub>2</sub> O@	4°C, InHg@U°C, mmHg@U°C					
	Compensated Temperature: 14°F to 122°F (-10°C to 50°C)						
Environmental	Operating Temperature: 14°F to 122°F (-10°C to 50°C)  Storage Temperature: -4°F to 158°F (-20°C to 70°C)						
	Storage Temperature: -4°F to 158°F (-20°C to 70°C) Humidity: <95%						
	Humidity: <95%  ≤15,000 psi: 1/4NPT male, 1/2NPT male, 1/4BSP male, 1/2BSP male, M20×1.5 male						
	>15,000 psi: 1/4HP female or 1/4HP male						
Dunanasura Baut	*1/4HP female: Autoclave F-250-C, 9/16" - 18 UNF-2B						
Pressure Port	*1/4HP male: Autoclave M-250-C, 9/16" - 18 UNF-2A						
	Differential Pressure: 0.236 inch (Ø6 mm) test hose						
	Other connections available per request						
	Battery: One 9V alkaline battery (included)						
	Battery life:  1. High power mode: 320 hours						
Power	2. Low power mode: 300 hours (10 readings/s), 600 hours (3 reading/s), or 4000 hours (1 reading/10s)						
	Power auto-off: 120, 90, 60, 45, 30, 15, 10, 5 and 1 minute auto-off options.						
	External power: 110/220V external power adapter (optional)						
	Case material: Aluminum alloy						
Enclosure	Wetted parts: 316L SS						
Enologuic	Dimension: Ø110mm X 35mm depth X 176mm height (panel mount gauge: Ø140mm X 86mm depth)						
	Weight: 0.6kg						
	Protection Level: IP67(available for 681IS GP15-60K)						
Compliance	Vibration: 5g (20-2000 Hz)						
Date Leave	Shock Resistance: 100g/11ms						
Data Logging (Available on with data logging	Data storage: 21,843 records (each record includes date, time, pressure and temperature)						
option ADT681DL)	·						
Communication	RS232 *(Do not use the RS-232 connector in a hazardous atmosphere)						
Warranty	1 year						

<sup>[1]</sup> FS = -14.5 psi [2] Applicable ADT681-RD-CPX

# Addite

### **PRESSURE RANGE**

Gauge Pressure [1]							
D/N	Pressure Range		Media <sup>[2]</sup> Accuracy			Burst	
P/N	(psi)	(bar)	Media.,	%FS	%RD	Pressure	
V15	-15	-1.0	G	0.02 (0.05, 0.1, 0.2)	N/A	3×	
GP2	2	0.16	G	0.05 (0.1, 0.2)	N/A	3×	
GP5	5	0.35	G, L	0.05 (0.1, 0.2)	0.1	3×	
GP10	10	0.7	G, L <sup>[3]</sup>	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP15	15	1.0	G, L <sup>[3]</sup>	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP30	30	2.0	G, L <sup>[3]</sup>	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP50	50	3.5	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP100	100	7.0	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP150	150	10	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP300	300	20	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP500	500	35	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP600	600	40	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP1K	1,000	70	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP2K	2,000	140	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP3K	3,000	200	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP5K	5,000	350	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP10K	10,000	700	G, L	0.02 (0.05, 0.1, 0.2)	0.1	3×	
GP15K	15,000	1,000	G, L	0.05 (0.1,0.2)	0.1	2×	
GP20K	20,000	1,400	G, L	0.05 (0.1,0.2)	N/A	1.5×	
GP25K	25,000	1,600	G, L	0.1 (0.2)	N/A	1.5×	
GP30K	30,000	2,000	G, L	0.1 (0.2)	N/A	1.5×	
GP36K	36,000	2,500	G, L	0.1 (0.2)	N/A	1.5×	
GP40K	40,000	2,800	G, L	0.1 (0.2)	N/A	1.35×	
GP50K	50,000	3,500	G, L	0.1 (0.2)	N/A	1.2×	
GP60K	60,000	4,200	G, L	0.1 (0.2)	N/A	1.1×	

- [1] Sealed gauge pressure for above 1,000 psi [2] G=Gas, L=Liquid [3] 0.02% FS for gas media only

Barometric Pressure						
P/N	Pressure Range		Media	Modio Acquirocu	Burst	
F/IN	Low	High	ivieula	Accuracy	Pressure	
BP	60 kPa	110 kPa	G	40 Pa	3×	









### Absolute Pressure Pressure Range Media Burst P/N Accuracy(%FS) Pressure (psi) (bar) AP5 0.1 (0.2) 5 0.35 G 3× AP10 G 0.1 (0.2) 10 0.7 3× AP15 15 1.0 G 0.1 (0.2) 3× AP30 30 2.0 G 0.1 (0.2) 3× AP50 50 3.5 G 0.1 (0.2) 3× AP100 100 7.0 G, L 0.05 (0.1, 0.2) 3× 300 AP300 20 G, L 0.05 (0.1, 0.2) 3× AP500 500 G, L 35 0.05 (0.1, 0.2) 3× AP1K 1,000 70 G, L 0.05 (0.1, 0.2) 3× AP3K 3.000 200 G. L 0.05 (0.1, 0.2) 3×

G, L

0.05 (0.1, 0.2)

3×

### [1] G=Gas, L=Liquid

5,000

350

AP5K

Differential Pressure						
P/N	Pressure Range		NA1:-	Accuracy	Burst	Static
P/IN	(inH <sub>2</sub> O)	(mbar)	Media	(%FS) <sup>[1]</sup>	Pressure	Pressure Range
DP1	±1	±2.5	G	0.05 <sup>[2]</sup>	100×	±10 psi
DP2	±2	±5.0	G	0.05 <sup>[2]</sup>	100×	±10 psi
DP5	±5	±10	G	$0.05^{[2]}$	50×	±10 psi
DP10	±10	±25	G	0.05 <sup>[2]</sup>	20×	±10 psi
DP20	±20	±50	G	0.05	20×	±10 psi
DP30	±30	±75	G	0.05	20×	±10 psi
DP50	±50	±160	G	0.05	3×	±10 psi
DP100	±100	±250	G	0.02	3×	±15 psi
DP150	±150	±350	G	0.02 (0.05)	3×	50 psi
DP300	±300	±700	G	0.02 (0.05)	3×	50 psi

[1] FS specification applies to the span of the range. Accuracy includes one year stability.

[2] 0.05%FS accuracy (incl 6 months stability). One year accuracy is 0.05%FS calibration accuracy combined with 0.05%FS one year stability.


Compound Pressure						
P/N	Pressure Range		Media	Accuracy		Burst
F/IN	(psi)	(bar)	[1]	%FS <sup>[2]</sup>	%RD	Pressure
CP2	±2	±0.16	G	0.05 (0.1,0.2)	N/A	3×
CP5	±5	±0.35	G	0.02 (0.05,0.1,0.2)	0.1	3×
CP10	±10	±0.7	G	0.02 (0.05,0.1,0.2)	0.1	3×
CP15	±15	±1	G	0.02 (0.05,0.1,0.2)	0.1	3×
CP30	-15 to 30	-1 to 2	G	0.02 (0.05,0.1,0.2)	0.1	3×
CP100	-15 to 100	-1 to 7	G, L	0.02 (0.05,0.1,0.2)	0.1	3×
CP300	-15 to 300	-1 to 20	G, L	0.02 (0.05,0.1,0.2)	0.1	3×

[1] G=Gas, L=Liquid

[2] FS specification applies to the span of the range.

### **ORDERING INFORMATION**

### Model Number

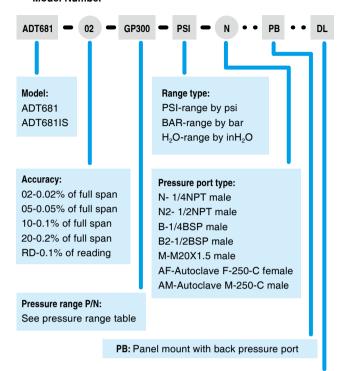

DL: Data logging

### Accessories Included

Rubber boot (Except panel mount)
9V alkaline battery (1 pc)
Manual
ISO17025 accredited calibration certificate

### Optional Accessories

Optional Accessories				
Model number	Description			
9812	110V/220V external power adapter (DC 9V) for 681 digital pressure gauge.			
9502	Additel/Log II real time data logging and graphical software for 681 and 672.			
9530-BASIC	Additel/Acal Automated calibration software with asset management, basic version			
9530-NET	Additel/Acal Automated calibration software with asset management, network version, Includes server installation and 1 user license			
9050	USB to RS232 (DB9/M) Adapter			
9050-EXT	RS 232 (DB9/M) extension cable, 9 feet			
9900-681	Carrying Case for one 681 digital pressure gauge			
9902	Carrying case for 4 gauges			
9251	Rubber boot for ADT681			
9200-681	Certified O <sub>2</sub> Cleaning for ADT681 gauges (some limitations apply)			

Note: For oil-free applications contact Additel.

Corporate Headquarters 2900 Saturn St #B Brea, CA 92821, USA